 


Series load cells: FCK - FCOL

Up to 300 kg application range

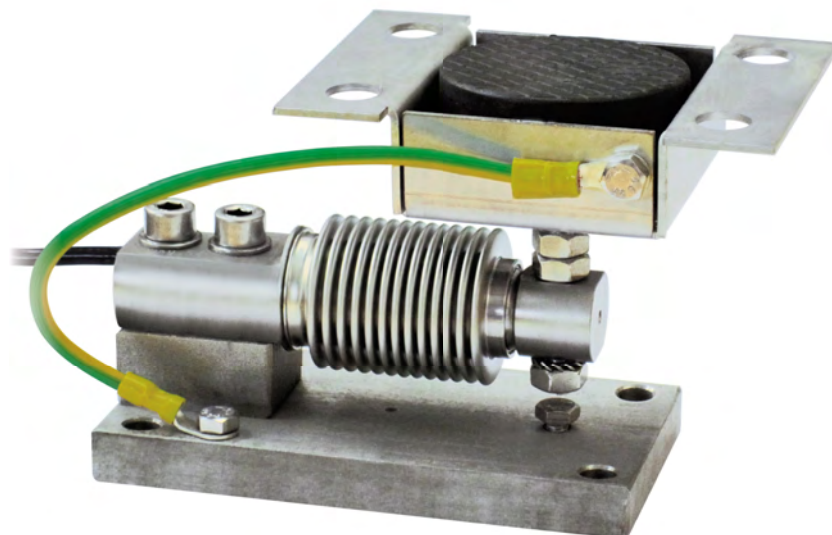

| MAX STATIC LOAD kg | FOR LOAD CELLS      | NET WEIGHT (kg) | CODE    |
|--------------------|---------------------|-----------------|---------|
| 200                | FCK - FCOL          | 1.7             | TFCPV   |
| 300                | FCOL (350 - 500 kg) | 1.7             | TFCPV10 |

Load cell not included.

### DESCRIPTION

- Adjustable upper plate in AISI 304 stainless steel (PPV).
- Lower plate and block in AISI 304 stainless steel.
- Constraint against lateral forces and anti-tilt by stainless steel self-centring joint foot.
- Misalignment compensation of the support plates structure.
- Partial height adjustment.
- Locking screw to avoid damage during transport and installation.

### По вопросам продаж и поддержки обращайтесь:

Архангельск (8182)63-90-72  
Астана +7(7172)727-132  
Астрахань (8512)99-46-04  
Барнаул (3852)73-04-60  
Белгород (4722)40-23-64  
Брянск (4832)59-03-52  
Владивосток (423)249-28-31  
Волгоград (844)278-03-48  
Вологда (8172)26-41-59  
Воронеж (473)204-51-73  
Екатеринбург (343)384-55-89  
Иваново (4932)77-34-06  
Ижевск (3412)26-03-58  
Иркутск (395) 279-98-46

Казань (843)206-01-48  
Калининград (4012)72-03-81  
Калуга (4842)92-23-67  
Кемерово (3842)65-04-62  
Киров (8332)68-02-04  
Краснодар (861)203-40-90  
Красноярск (391)204-63-61  
Курск (4712)77-13-04  
Липецк (4742)52-20-81  
Магнитогорск (3519)55-03-13  
Москва (495)268-04-70  
Мурманск (8152)59-64-93  
Набережные Челны (8552)20-53-41  
Нижний Новгород (831)429-08-12

Новокузнецк (3843)20-46-81  
Новосибирск (383)227-86-73  
Омск (3812)21-46-40  
Орел (4862)44-53-42  
Оренбург (3532)37-68-04  
Пенза (8412)22-31-16  
Пермь (342)205-81-47  
Ростов-на-Дону (863)308-18-15  
Рязань (4912)46-61-64  
Самара (846)206-03-16  
Санкт-Петербург (812)309-46-40  
Саратов (845)249-38-78  
Севастополь (8692)22-31-93  
Симферополь (3652)67-13-56

Смоленск (4812)29-41-54  
Сочи (862)225-72-31  
Ставрополь (8652)20-65-13  
Сургут (3462)77-98-35  
Тверь (4822)63-31-35  
Томск (3822)98-41-53  
Тула (4872)74-02-29  
Тюмень (3452)66-21-18  
Ульяновск (8422)24-23-59  
Уфа (347)229-48-12  
Хабаровск (4212)92-98-04  
Челябинск (351)202-03-61  
Череповец (8202)49-02-64  
Ярославль (4852)69-52-93

Киргизия (996)312-96-26-47

 
Казахстан (772)734-952-31

Таджикистан (992)427-82-92-69


Эл. почта [mfd@nt-rt.ru](mailto:mfd@nt-rt.ru) || Сайт: <https://laumas.nt-rt.ru/>

### DIMENSIONS AND TECHNICAL SPECIFICATIONS


- During the transport and installation the lock (\*) must touch under the load cell. After installation, move the lock away from the load cell.
- Interconnect the lower plates to the earthing.
- In case of structure with four-point support, if one-point does not touch the upper part of the mounting kit, you must proceed to insert a shim before fixing the bolts.

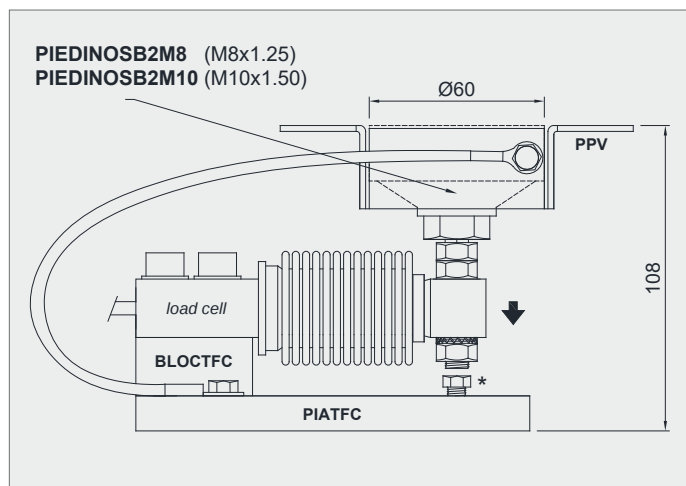


PIATFC

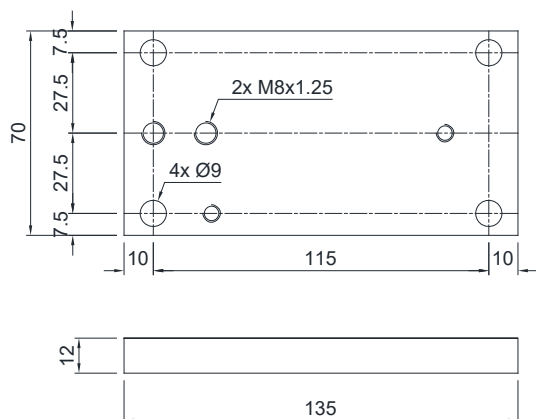 


BLOCTFC

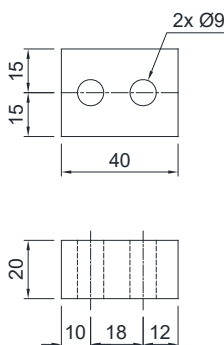 


PPV

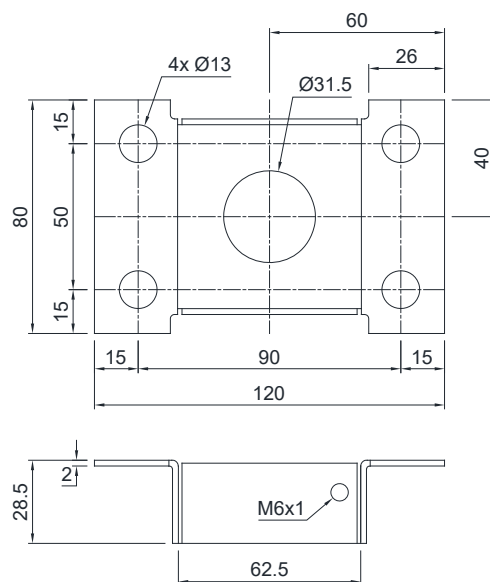 


#### FIXING TO THE WEIGHED STRUCTURE

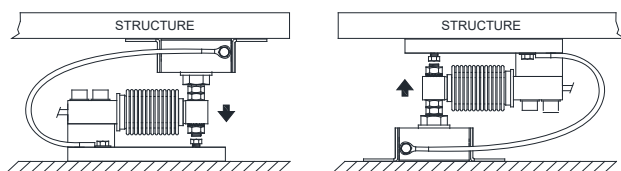 

#### POSSIBLE UPPER PLATE POSITIONS

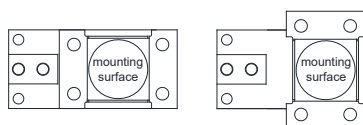 

PIEDINOSB2M10  
M10x1.50

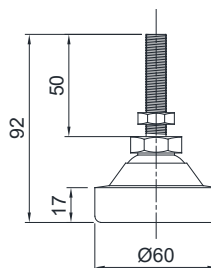 

PIEDINOSB2M8  
M8x1.25

