

V15000/100000

MOUNTING KIT for COMPRESSION-LOW PROFILE load cells

LAUMAS®

Series load cells: CBL - CBX

Up to 100000 kg application range

DESCRIPTION


- AISI 304 stainless steel upper and lower plates.
- AISI 304 stainless steel laminas against lateral forces.
- Anti-tilt constraint consisting of two threaded rods with self-locking nut.





MAX STATIC LOAD kg	FOR LOAD CELLS	NET WEIGHT (kg)	CODE
30000	CBL (15000 kg) - CBX (30000 kg)	9	V15000
50000	CBL (30000 kg) - CBX (50000 kg)	17.5	V30000
100000	CBL (50000 kg) - CBL (100000 kg)	33.5	V100000

Load cell not included.

HORIZONTAL CONSTRAINTS
ORIENTATION
IN STRUCTURES WITH
3-POINTS SUPPORT

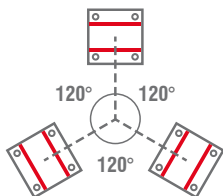

HORIZONTAL CONSTRAINTS
ORIENTATION
IN STRUCTURES WITH
4-POINTS SUPPORT

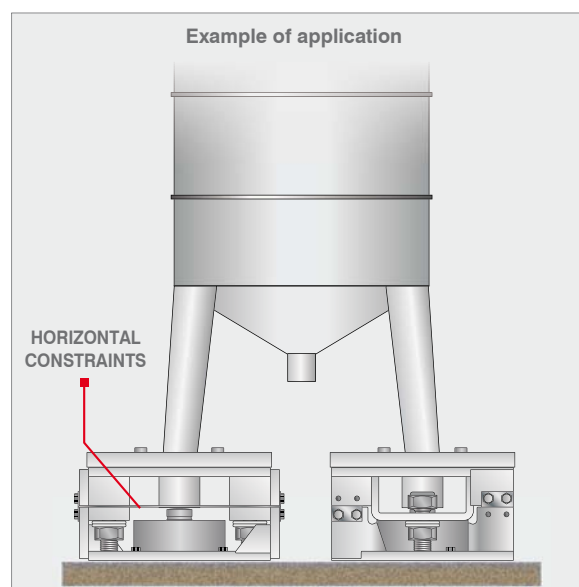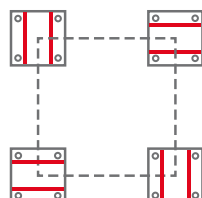

COMPLEMENTARY ACCESSORIES

	DESCRIPTION	CODE
	AISI 304 stainless steel adapter:	
	V15000 for load cells:	Ø82 mm ADAT100CBX15T
	V30000 for load cells:	Ø100 mm ADAT126CBX30T
	V100000 for load cells:	Ø126 mm ADAT165CBX50T
	Galvanized steel turnbuckle with dual ball-and-socket. Net weight: 2.10 kg Working load: 2500 kg Ultimate overload: 10000 kg	TENDITORE300
	Galvanized steel anchor plate for TENDITORE300 Net weight: 1.5 kg	PTEND

V15000/100000

MOUNTING KIT for COMPRESSION-LOW PROFILE load cells

LAUMAS®


DIMENSIONS AND TECHNICAL SPECIFICATIONS

Upper and lower plates [2] must rest completely on not deformable surfaces. To ensure the stability of the structure, the system designer must predict any further precaution against side shifts and anti-tilt in function of: knocks and vibrations, wind effect, seismic conditions and hardness of support structure.


- Install the weighed system using only the mounting kit without the load cell [1] and inserting in its place a piece of pipe (1-2 mm higher than the load cell).
- To finish the installation (weldings, etc..), remove the piece of pipe and then removing the bolts to fix the the load cell [7] insert the load cell [1] in mounting kit.
- Connect lower and upper plates [2] to the earthing system then loosen nuts [5] ; verify that the threaded rod [4] slides into the hole; turn anti-tilt nuts [6] to a distance of 1 mm from plate.
- Tighten the three bolts to fix the load cell [7].

	A	B	C	D	E	F	G	H	I	L	M	Weight
V15000	102	10	200	160	10	47	20	M12x1.75	Ø17	M20x2.5	40	9 kg
V30000	132	12	250	185	12	70	32.5	M18x2.5	Ø20	M24x3	60	17 kg
V100000	155	15	320	250	15	95	35	M20x2.5	Ø23	M30x3.5	70	34 kg

Dimensions (mm)

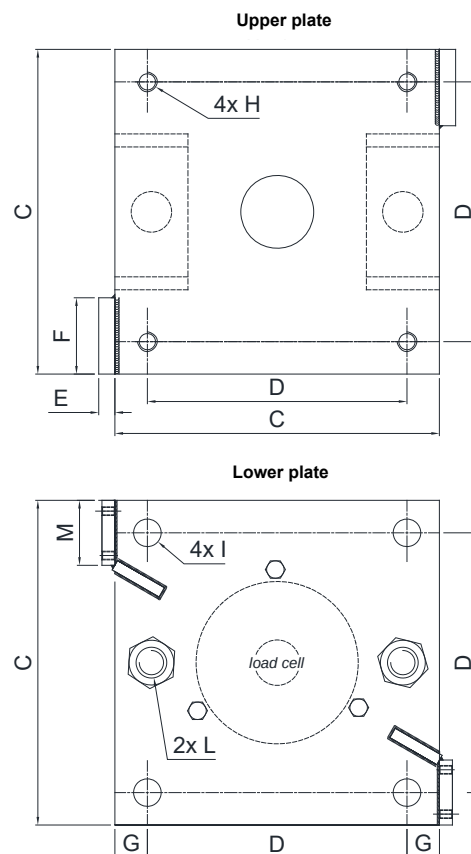


- [1] Load cell.
- [2] AISI 304 stainless steel upper and lower plates.
- [3] AISI 304 stainless steel laminas with horizontal constraint function.
- [4] Threaded rod.
- [5] Nut to be used as jack.
- [6] Anti-tilt self-locking nut.
- [7] M6 bolts to fix the load cell.

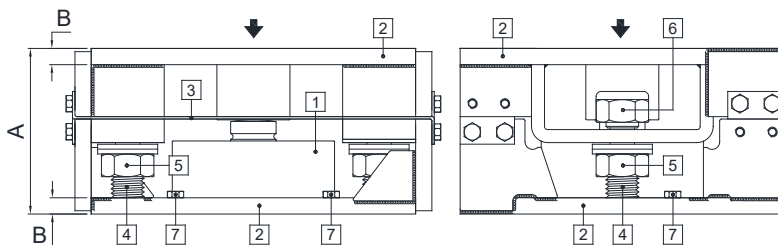


Application example:

how to make further horizontal constraints with the TENDITORE300 accessory

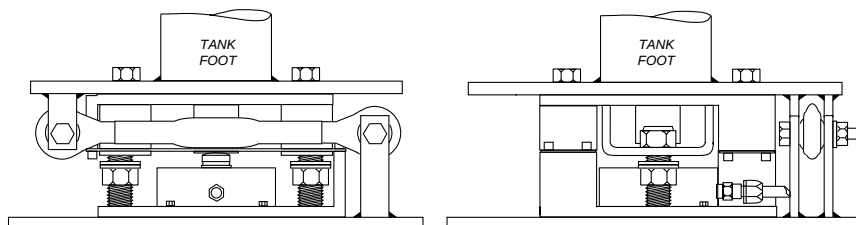


CONSTRAINTS PLACEMENT ON 3/4 SUPPORTS: the horizontal constraints can be positioned both on supports and on the four sides, centrally between two supports.

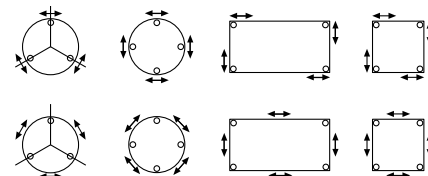


STRUCTURE WITH 3-POINTS SUPPORT

1 CONSTRAINT FOR SUPPORT

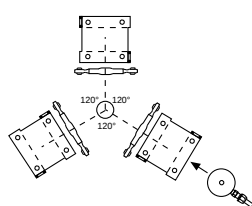


2 CONSTRAINTS FOR SUPPORT

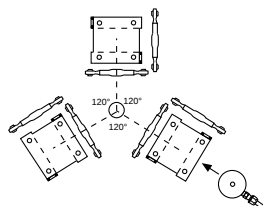


STRUCTURE WITH 4-POINTS SUPPORT

1 CONSTRAINT FOR SUPPORT

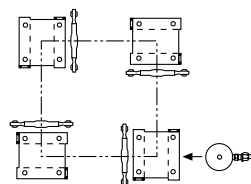

2 CONSTRAINTS FOR SUPPORT

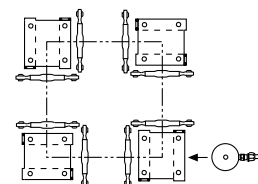

По вопросам продаж и поддержки обращайтесь:

Архангельск (8182)63-90-72	Казань (843)206-01-48	Новокузнецк (3843)20-46-81	Смоленск (4812)29-41-54
Астана +7(7172)727-132	Калининград (4012)72-03-81	Новосибирск (383)227-86-73	Сочи (862)225-72-31
Астрахань (8512)99-46-04	Калуга (4842)92-23-67	Омск (3812)21-46-40	Ставрополь (8652)20-65-13
Барнаул (3852)73-04-60	Кемерово (3842)65-04-62	Орел (4862)44-53-42	Сургут (3462)77-98-35
Белгород (4722)40-23-64	Киров (8332)68-02-04	Оренбург (3532)37-68-04	Тверь (4822)63-31-35
Брянск (4832)59-03-52	Краснодар (861)203-40-90	Пенза (8412)22-31-16	Томск (3822)98-41-53
Владивосток (423)249-28-31	Красноярск (391)204-63-61	Пермь (342)205-81-47	Тула (4872)74-02-29
Волгоград (844)278-03-48	Курск (4712)77-13-04	Ростов-на-Дону (863)308-18-15	Тюмень (3452)66-21-18
Вологда (8172)26-41-59	Липецк (4742)52-20-81	Рязань (4912)46-61-64	Ульяновск (8422)24-23-59
Воронеж (473)204-51-73	Магнитогорск (3519)55-03-13	Самара (846)206-03-16	Уфа (347)229-48-12
Екатеринбург (343)384-55-89	Москва (495)268-04-70	Санкт-Петербург (812)309-46-40	Хабаровск (4212)92-98-04
Иваново (4932)77-34-06	Мурманск (8152)59-64-93	Саратов (845)249-38-78	Челябинск (351)202-03-61
Ижевск (3412)26-03-58	Набережные Челны (8552)20-53-41	Севастополь (8692)22-31-93	Череповец (8202)49-02-64
Иркутск (395) 279-98-46	Нижний Новгород (831)429-08-12	Симферополь (3652)67-13-56	Ярославль (4852)69-52-93

Киргизия (996)312-96-26-47

Казахстан (772)734-952-31

Таджикистан (992)427-82-92-69

Эл. почта mfd@nt-rt.ru || Сайт: <https://laumas.nt-rt.ru/>