

WRBIL

Технические характеристики

По вопросам продаж и поддержки обращайтесь:

Алматы (7273)495-231
Архангельск (8182)63-90-72
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89
Иваново (4932)77-34-06
Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Россия (495)268-04-70

Казань (843)206-01-48
Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Липецк (4742)52-20-81
Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижний Новгород (831)429-08-12
Киргизия (996)312-96-26-47

Новокузнецк (3843)20-46-81
Новосибирск (383)227-86-73
Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Пермь (342)205-81-47
Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Симферополь (3652)67-13-56
Казахстан (7172)727-132

Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Сургут (3462)77-98-35
Тверь (4822)63-31-35
Томск (3822)98-41-53
Тула (4872)74-02-29
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Ярославль (4852)69-52-93



A Scale



B Scale



C Scale

PROGRAM	SCALE		CODE
* 31 PRODUCTS	A	50 formulas / 20 steps / 1 loading scale	WR31/50/1
* 26 PRODUCTS	A	50 formulas / 20 steps / 1 loading scale + 1 unload	WR26/50/1+1
* 27 PRODUCTS	A + B	50 formulas / 20 steps / 2 loading scales	WR27/50/2
* 22 PRODUCTS	A + B	50 formulas / 20 steps / 2 loading scales + 1 unload	WR22/50/2+1
* 23 PRODUCTS	A + B + C	50 formulas / 20 steps / 3 loading scales	WR23/50/3
24 PRODUCTS	A + B + C	50 formulas / 20 steps / 3 loading scales	WR24/50/3

★ In addition to the automatically batched products, it is possible set up to 6 more manually batched products

DESCRIPTION

- The WRBIL system manages weighing in batching plants that require up to 3 scales in the same production line.
- It manages from 1 to 3 scales simultaneously, with management of 22 to 31 different products distributed between scales, plus 6 products for manual additions (false scales).
- The WR26/50/1+1 and WR22/50/2+1 versions are able to manage, in addition to the loading scales, even 1 unloading scale.
- Supervisory software by PC via RS422/RS485 connection (on request).
- It is possible to select two different operating modes:
 - the second batching cycle can be started even if the other scales are at first batching cycle (max 1 cycle of displacement).
 - the second batching cycle can be started only if the other scales have finished the first batching cycle.
- In case of damage to a transmitter it is possible to connect the load cells directly to the WR ("Emergency scale" function).

The system consists of:

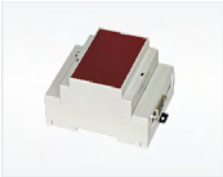
- 1 WR main unit;
- From 1 to 3 weight indicators (**M** approved): W100, W200, WDOS, WDESK, WINOX (the number of indicators depends on the number of scales);
- From 3 to 4 external 8-relay modules: suitable for mounting on Omega/DIN rail, dimensions: 93x60x126 mm; 24 VDC 8 W power supply; 115 VAC 0.5 A external contacts.

For INPUTS/OUTPUTS AND COMMUNICATION, MAIN FUNCTIONS and other data refer to instrument data sheets: WR, W100, W200, WDOS, WDESK, WINOX.

TECHNICAL FEATURES

Power supply and consumption	230 (115) VAC; 50/60 Hz; 25 VA
Number of load cells • Load cells supply	up to 8 (350 Ω) • 5 VDC/120 mA
Linearity	<0.01% full scale
Thermal drift	<0.0003% full scale/°C
A/D Converter	24 bit
Internal divisions	60000 (20% ÷ 100% full scale)
Measurement range	-7.5 mV +17.5 mV
Display range	-99999; +900000
Decimals • Display increments	0-4 • x1 x2 x5 x10 x20 x50 x100
Digital filter • Readings per second	0.2-25 Hz • 6, 12, 25, 50 reading/s
Relay outputs	n. 8 - 115 VAC/30 VDC 0.5 A
Optoisolated digital inputs	n. 8 - 12/24 VDC PNP
Serial ports	RS232, RS422, RS485
Baud rate	9600 (bit/s)
Humidity (condensate free)	85%
Storage temperature	-20°C +70°C
Working temperature	-10°C +50°C

OPTIONS ON REQUEST

	DESCRIZIONE	CODE
	Profibus converter, IP40, suitable for Omega/DIN rail mounting, allows to connect 1 or 2 Laumas instruments in Slave configuration to any security Profibus DP Master by means of the RS422/485 port. Dimensions: 71x58x90 mm. 1 instrument 2 instruments	MPROFIUNO MPROFIDUE
	Supervisory software by PC: formulas storage up to 500; production data by formula; quantities consumed for each product; traceability of raw materials used for all batching cycles; print of batching data.	PROG WRBIL

По вопросам продаж и поддержки обращайтесь:

Алматы (7273)495-231
Архангельск (8182)63-90-72
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89
Иваново (4932)77-34-06
Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Россия (495)268-04-70

Казань (843)206-01-48
Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Липецк (4742)52-20-81
Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижний Новгород (831)429-08-12
Киргизия (996)312-96-26-47

Новокузнецк (3843)20-46-81
Новосибирск (383)227-86-73
Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Пермь (342)205-81-47
Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Симферополь (3652)67-13-56
Казахстан (7172)727-132

Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Сургут (3462)77-98-35
Тверь (4822)63-31-35
Томск (3822)98-41-53
Тула (4872)74-02-29
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Ярославль (4852)69-52-93