

WT60

Технические характеристики

По вопросам продаж и поддержки обращайтесь:

Алматы (7273)495-231
Архангельск (8182)63-90-72
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89
Иваново (4932)77-34-06
Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Россия (495)268-04-70

Казань (843)206-01-48
Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Липецк (4742)52-20-81
Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижний Новгород (831)429-08-12
Киргизия (996)312-96-26-47

Новокузнецк (3843)20-46-81
Новосибирск (383)227-86-73
Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Пермь (342)205-81-47
Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Симферополь (3652)67-13-56
Казахстан (7172)727-132

Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Сургут (3462)77-98-35
Тверь (4822)63-31-35
Томск (3822)98-41-53
Тула (4872)74-02-29
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Ярославль (4852)69-52-93

WT60

WEIGHT INDICATOR - WEIGHING AND BATCHING

LAUMAS®



MODBUS RTU



PROGRAM

CODE

BASE	4 setpoint	WT60B
BASE ANALOG	Analog Output	WT60/ANA
LAOD	12 formulas	WT60C
UNLOAD	12 formulas	WT60S
3 PRODUCTS	12 formulas	WT603P
* 6 PRODUCTS	12 formulas	WT606P
* 14 PRODUCTS	12 formulas	WT6014P

★ External 8-relay modules included

DESCRIPTION

- Weight indicator in DIN box suitable for panel mounting (dimensions: 144x72x170 mm; drilling template: 139x67 mm; 170 mm mounting depth with serial wirings and terminal blocks). IP56 window cover (on request).
- 5-digit semi-alphanumeric red LED display (20 mm height).
- 8 signalling LED.
- 5-key keyboard.
- IP54 front panel protection rating.
- Extractable terminal boards.
- External 8-relay modules included:
 - for **6 PRODUCTS**: dimensions: 80x60x160 mm; 115 VAC 2A external contacts.
 - for **14 PRODUCTS**: dimensions: 80x60x160 mm, 80x60x120 mm; 115 VAC 2A external contacts.

INPUTS/OUTPUTS AND COMMUNICATION

- 2 independent serial ports: COM1 = RS232 and COM2 = RS422/485 for communication via ModBus RTU protocol, Profibus DP, ASCII Laumas bidirectional or continuous one way transmission.
- 4 relay outputs controlled by the setpoint values or via protocols.
- 3 optoisolated PNP digital inputs.
- 1 load cell dedicated input.
- Current or voltage 16 bit optoisolated analog output (option on request for batching programs).

MAIN FUNCTIONS

- Connections to:
 - PLC via analog output (WT60/ANA)
 - PC/PLC via COM1/2 (up to 32 instruments) with PC supervision software;
 - remote display (COM1/2) and printer (COM1).
 - up to 8 load cells in parallel by junction box.
- Digital filter to reduce the effects of weight oscillation.
- Theoretical calibration (via keyboard) and real calibration (with sample weights).
- Tare weight zero setting.
- Gross weight zero tracking.
- Semi-automatic zero.
- Displaying of the maximum weight value reached (peak).
- Weight value printing with date and time via keyboard or external contact.
- Reading the load cells value expressed in mV: load cells connections continuous check.
- Password to protect the access to selected functions.

BASE PROGRAM / BASE WITH ANALOG OUTPUT

- Weight indicator with 4 setpoint.
- Hysteresis and setpoint value setting.
- Automatic zero setting at power-on.

BATCHING PROGRAM

- 50 settable formulas.
- Batching resume after a blackout.
- Automatic fall calculation.
- Tolerance value control.
- Precision batching through slow function.
- Precision batching through tapping function.
- Consumption storage.
- Print of batching data.
- Alarm contact management.
- Selection of the first 12 formulas via external selector switch or contact (option on request).
- Batching start via external contact or keyboard.
- Setting a single tolerance value for all formulas/products
- Current batching can be interrupted via keyboard or external contact.
- Pause of the batching by the keyboard.

Only for:

LOAD program

- Autotare at batching start.

UNLOAD program

- Automatic loading of the product into the weighed structure.
- Management of batching with big bags.

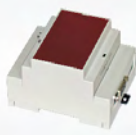
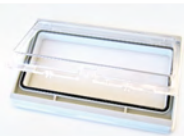
3-6-14 PRODUCTS program

- Autotare at batching start.
- Net weight batching for each product.
- Slow contact for a product batching by two different extraction speeds (6 PRODUCTS).

TECHNICAL FEATURES

Power supply and consumption	115/230 VAC; 50/60 Hz; 10 VA
Number of load cells • Load cells supply	up to 8 (350 Ω) 4/6 wires • 5 VDC/120 mA
Linearity • Analog output linearity	<0.01% full scale • <0.03% full scale
Thermal drift • Analog output thermal drift	<0.0003% full scale/°C • <0.001% full scale/°C
A/D Converter	24 bit
Internal divisions	±99999
Measurement range	±2 mV ±19.5 mV
Display range	± 99999 (20% ÷ 100% full scale)
Decimals • Display increments	0-4 • x1 x2 x5 x10 x20 x50 x100
Digital filter • Readings per second	0.2-25 Hz • 5, 10, 25, 50 reading/s
Relay outputs	n. 4 - 115 VAC/30 VDC; 0.5 A
Digital inputs	n. 3
Serial ports	COM1: RS232; COM2: RS422/RS485
Baud rate	1200, 2400, 4800, 9600, 14400, 19200, 28800, 38400, 57600 (bit/s)
Optoisolated analog output	16 bit = 65536 divisions; 0÷20 mA; 4÷20 mA (up to 300 Ω) 0÷10 V; 0÷5 V; 0-5 V; 0-10 V (min 10 kΩ)
Humidity (condensate free)	85%
Storage temperature	-20 °C +70 °C
Working temperature	-10 °C +50 °C

OPTIONS ON REQUEST

	DESCRIZIONE	CODE
 ANALOG OUTPUT	Optoisolated 16 bit analog output.	
	Profibus converter, IP40, suitable for Omega/DIN rail mounting, allows to connect 1 or 2 Laumas instruments in Slave configuration to any security Profibus DP Master by means of the RS422/RS485 port. Dimensions: 71x58x90 mm. 1 instrument 2 instruments	MPROFIUNO MPROFIDUE
	Weight indicator with external selector switch for 12 groups by 4 setpoint selection and management software for weight sorting machine. ➔ Available only for BASE version	WT60B12F
	External selector switch for selecting the first 12 formulas.	EC
	Selection of the first 12 formulas via external contact.	E
	IP56 window cover for front panel mounting. External dimensions: 220x140x40 mm. Inner place suitable for instrument mounting: 178x77 mm	S

По вопросам продаж и поддержки обращайтесь:

Алматы (7273)495-231
Архангельск (8182)63-90-72
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89
Иваново (4932)77-34-06
Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Россия (495)268-04-70

Казань (843)206-01-48
Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Липецк (4742)52-20-81
Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижний Новгород (831)429-08-12
Киргизия (996)312-96-26-47

Новокузнецк (3843)20-46-81
Новосибирск (383)227-86-73
Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Пермь (342)205-81-47
Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Симферополь (3652)67-13-56
Казахстан (7172)727-132

Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Сургут (3462)77-98-35
Тверь (4822)63-31-35
Томск (3822)98-41-53
Тула (4872)74-02-29
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Ярославль (4852)69-52-93